
## by ASTON SEALS® VERSUS OR

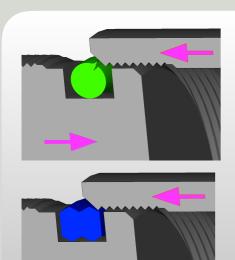




Installation damage



Damage to an O-ring during installation can occur when:

- There are sharp corners on mating metal over which the O-ring must pass during assembly
- Insufficient lead-in chamfer
- Blind grooves in multi-port valves
- O-ring twisted/pinched during installation
- O-ring not properly lubricated before installation
- · O-ring dirty upon installation

Extrusion and nibbling of the O-ring is a primary cause of seal failure in dynamic applications such as Hydraulic Rod and Piston seals. This form of failure may also be found from time to time in static applications subject to high pressure pulsing which causes the clearance gap of the mating flanges to open and close, trapping the O-ring between the mating surfaces.

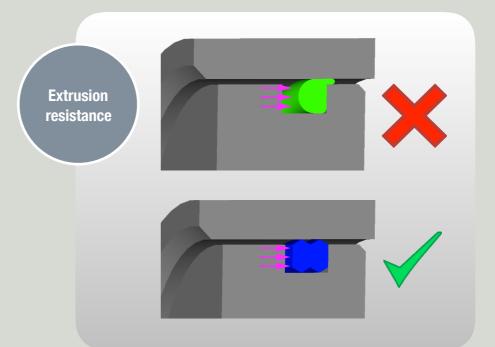


## A STEP FORWARD ...




ASTON SEALS®

website: www.astonseals.com email: info@astonseals.com

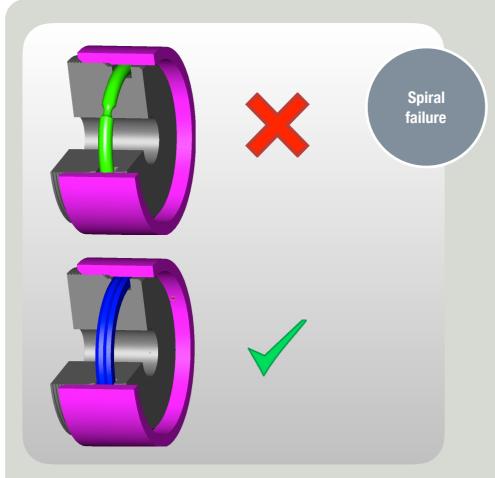

Spiral failure of an O-ring is often found on long stroke hydraulic piston seals and to a lesser degree on rod seals. This type of O-ring failure is caused when the seal becomes "hung-up" at one point on its diameter (against the cylinder wall) and slides and rolls at the same time. The resultant twisting of the O-ring as the sealed device is cycled finally causes the seal to develop a series of deep spiral cuts (usually at a 45° angle) on the surface of the seal.

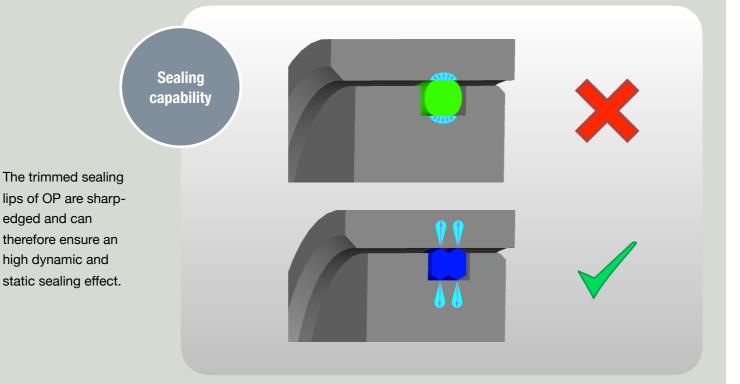

## A STEP FORWARD ...



website: www.astonseals.com email: info@astonseals.com